HOW TO MEASURE YOUR VINYL PANELS

Accurate measurements help ensure complete coverage and a proper fit. Measure carefully, double-check your numbers, and enter the finished panel size—including the required overlap—when ordering.

ZIPPER & TRACK PANELS

Solid Vinyl

1. Measure the opening width. Measure from the inside edge of one post to the inside edge of the opposite post.
2. Measure the opening height. Measure from the top of the opening to the surface, at least 1.5” above top edge, down to the floor where the panel will end.
3. Check your measurements. Measure the width and height in more than one location in case the opening is not perfectly square.
4. Enter the finished panel size. Use the complete width and height when placing your order.

EXAMPLE: A 48-inch width × 72-inch height opening, including at least 1.5” inches above top opening, is what should be recorded.





667-299-5393 ezvinylsolutions@gmail.com ezvinylsolutions.com


EZ VINYL SOLUTIONS

GROMMET PANELS

Vinyl Panels with Grommets

1. Measure the opening width. Measure from the inside edge of one post to the inside edge of the opposite post.
2. Add the width overlap. Add 2 inches on the left and 2 inches on the right—a total of 4 inches.
3. Measure the opening height. Measure from the top of the opening to the surface, at least 2” above top edge, down to the floor where the panel will end.
4. Check your measurements. Measure the width and height in more than one location to ensure the panel provides complete coverage.
5. Enter the finished panel size. Use the complete width and height, including the overlap, when placing your order.

EXAMPLE: A 48-inch width × 72-inch height opening, including at least 2” inches above top opening, requires a panel measuring at least 52 inches × 72 inches.

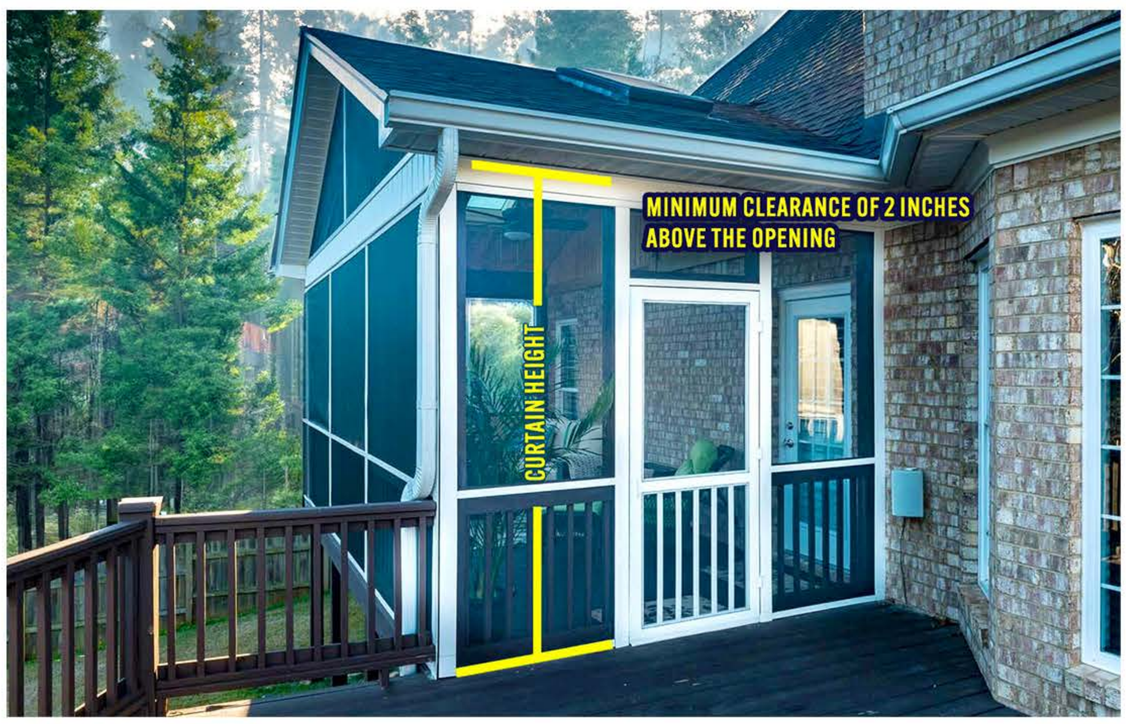



667-299-5393 ezvinylsolutions@gmail.com ezvinylsolutions.com